Training Guide
Model 3000 Pump
Primary Operation

Invert the 3-chambered cassette and prime the set. Hang solution so the bottom of the drip chamber is at least 6-12 inches above the pump. Open the door. Place cassette in pump with flat side facing you. Slide Safety Clip up and insert into slot. Close the door. Open the roller clamp.

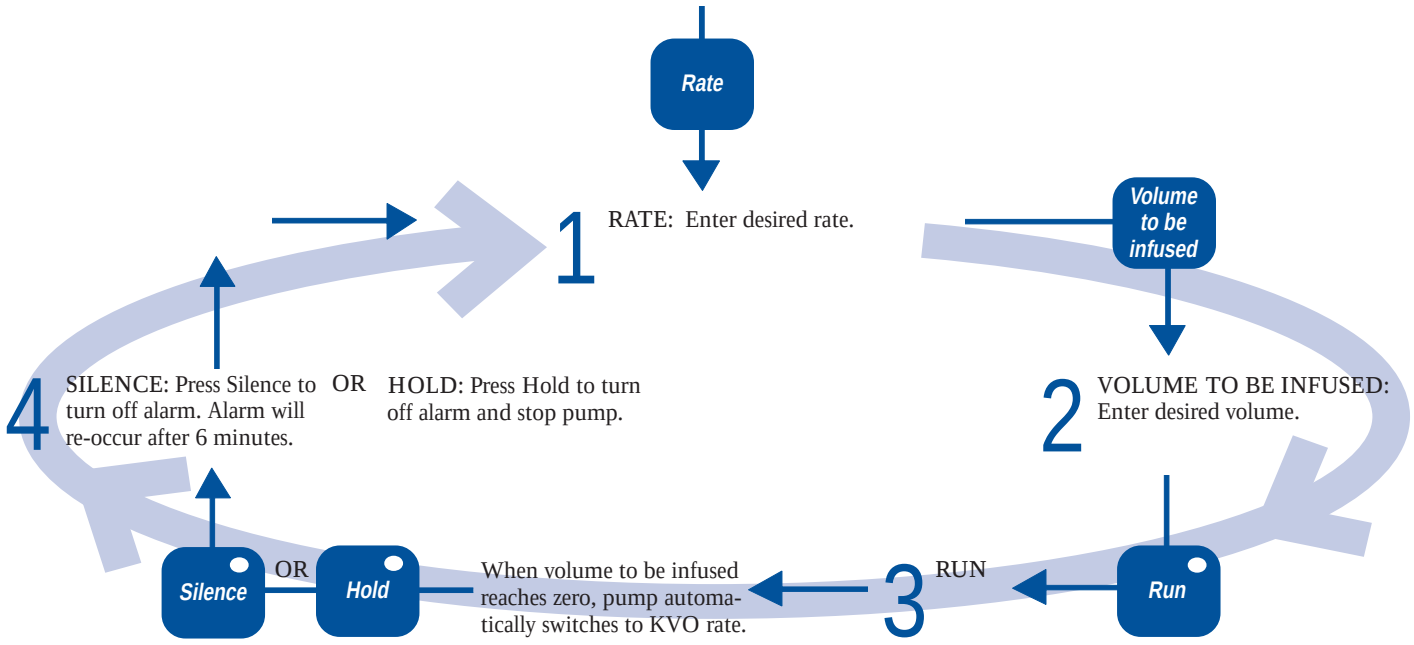

OTHER PUMP FUNCTIONS

Total Volume — Keeps total of all infusions until cleared.

Occlusion Alarm Setting — Medium setting is automatic. Select high or low setting if instructed.

TO REPEAT SAME INFUSION

Volume to be Infused — Press twice to reset to previous setting.

Run — Press Run.

Over for Secondary Operation

Training Guide
Model 3000 Pump
Secondary Operation

If using pump for automatic piggybacking, the primary line must have a check valve set. The pump is running on primary. Using an 8-inch hanger, lower the primary bag. The primary drip chamber must be 6-12 inches above pump (raise pole if necessary). Elevate the secondary bag.

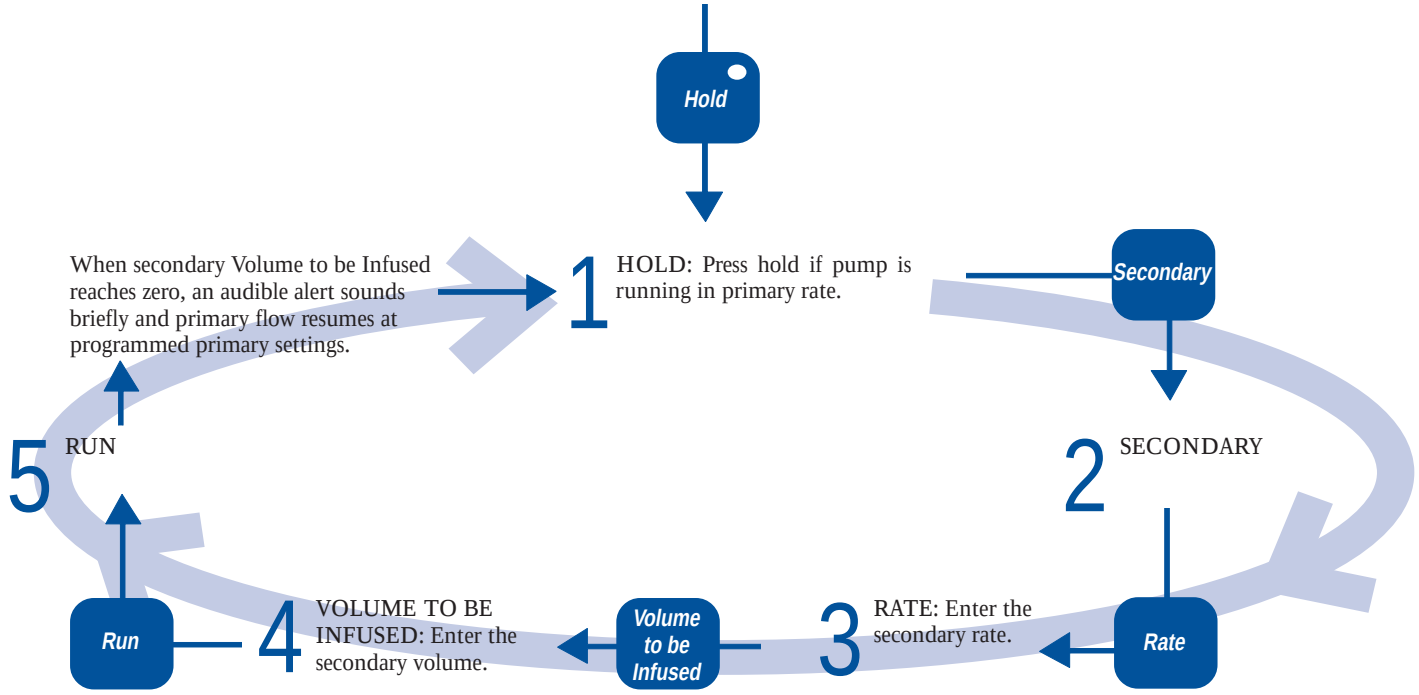
Hold
1 HOLD: Press hold if pump is running in primary rate.
Secondary
2 SECONDARY
Rate
3 RATE: Enter the secondary rate.
Volume to be Infused
4 VOLUME TO BE INFUSED: Enter the secondary volume.
Run
5 RUN
When secondary Volume to be Infused reaches zero, an audible alert sounds briefly and primary flow resumes at programmed primary settings.

Visit our web site at www.deltec.com

Customer and Clinical Services: 1 (800) 426-2448

Deltec
SIMS Deltec, Inc., St. Paul, MN 55112 U.S.A.

SIMS SMITHS INDUSTRIES *Medical Systems*

CE

©1999 SIMS Deltec, Inc. All rights reserved. Printed in U.S.A. 10/99 19997

WARNING: This Training Guide should be used by clinicians only. Do not permit patients to have access to this guide, as the information would allow access to all programming and operating functions. Read the entire *Operator's Manual* before operating the Model 3000 pump. Failure to properly follow warnings, cautions and instructions could result in death or serious injury to the patient. If the pump is dropped or hit, inspect it for damage. Do not use a pump that is damaged or is not functioning properly.